PCLink for TextLink Installation Guide (Windows Vista)

There are three sections to the Installation procedure.

- 1. Install PCLink software
- 2. Com port setup.
- 3. Connect TextLink to PC.

Install PCLink software

Insert the PCLink CD into the CD Rom drive of your PC.

The PCLink Welcome window will appear.

If windows does not autostart the installation, browse the CD and double click on "SETUP.EXE"

Click "Next" to continue

The Setup window will appear.





Click "Next" to continue

The installation will start



Installation complete



Click "Finish"

Com Port setup

For computers with a physical com port connector, read section 1. If your computer does not have a physical com port connector, go to Section 2.

Section 1.

For computers with a physical Com Port connector, you will need to verify that the port you will use is assigned a Com Port number from 1 to 4. This can be done by checking the Com Ports in Windows Device Manager.

Section 2.

For computers without a physical Com Port connector, you will need a USB Serial Converter. Connect USB Serial Converter.

Windows should automatically detect and install the device.

You will now need to verify that the port you will use is assigned a Com Port number from 1 to 4.

The following instructions will describe how to establish which Com port your USB to Serial adaptor is using.

Right click on "Computer" icon on your desktop.



Select "Properties"



If your device is assigned a port number higher than COM4, you will need to change this using the following method.

Right click on the device and select "Properties"

The Properties window will open.

Alethorik adapters Ports (COM & LPT) Potes(R) Active Management Technology - SOL (COM3) Pote(R) Active Management Technology - SOL (COM3)
Prelific USD-ta-Sevial Comm Port (CON4) Properties 📃 🗙
General Pot Settings Driver Details
Prolific USBNs-Serial Comm Part (CDIM4)
Device type: Pots (COM & LPT)
Manufacturer: Prolific
Location: Pert_#0001 Hub_#0007
Device status
<u>*</u>
OK Carol
Protection use base served commit (COPH4) Properties [2]
General Pot Setongs Dever Details
Bits per second: 10.00
Data bite: 3
Barty: None 💌
gap bits: 1
Rev control: Nove ×

Advanced... Bestare Defaults

0K

Cancel

Click on "Port Settings"

Then click on "Advanced"

The Advanced	
Settings window will	
open.	

E-laster								
Select high	er settings f	orfasterpe	formance.	10.				Car
Beceive Buffer	Lover (1)				—ņ	High (14)	(14)	Def
Itenant Buffer	Low (1)	-			— j	High (16)	(16)	

Click on the COM Port Number drop-down list and select a port number from 1 to 4 which is not in use.



Click "OK"

Click "OK"



The Device Manager window should now show the device with the new port number.

B - Monitors P- 2 Network adapters B - 7 Ports (COM & LPT) - 7 Intel(R) Active Management Technology - SOL (COM3) - 7 Profile USS-to-Serial Comm Port (COM2) R - Processors B - 2 Security Devices

You can now close the Device manager and the System window.

COM Bart Number: COM2

٠

Connect TextLink to PC

Connect one end of the PC Link cable to the USB Serial Converter or to the physical Com Port connector on your PC and the other end to the TextLink textphone.

Switch on the TextLink and run the PCLink software. PCLink is now ready to use.	CH Lek Options PyrctanKeys Help V18> Prefix:off Answer:off Calls:0 Press Menu for options> Moss ÷ Exter Escope VCD GA SK Exd Cell Sile mode.				
Or alternatively, before swi on the TextLink, run the PC software. You will receive an error message.	tching CLink	Error Detecting Textphone. X Error detecting textphone. Please check connection and restart textphone, then select autoLink from the connections menu. Press cancel to exit.			
Click "OK"		OK Cancel			
The following window will appear with no text in the conversation window.	Per Link Options	* Pyrctim Keys Help			
Switch on the TextLink then click "Link" in the menu and select "Autolink"	Deconnected	Purchan Ceys Help			

